




1. Drive staple about half its length into brace post about 4 inches above Brace Rail, on opposite side from brace.

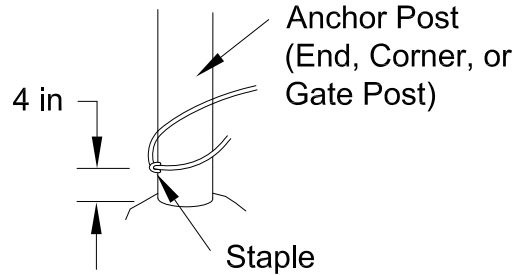


2. Drive staple in a similar manner on Anchor Post about 4 inches above ground, on opposite side from Brace.

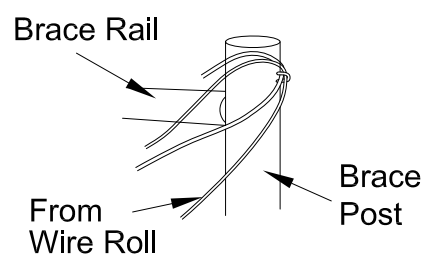



3. Unroll enough Brace Wire for two complete loops around Anchor and Brace Posts. Thread Brace Wire through staples.

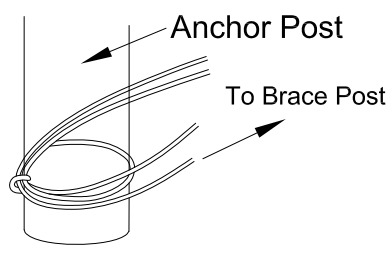

4. Wrap wire around Anchor Post and return toward Brace Post.

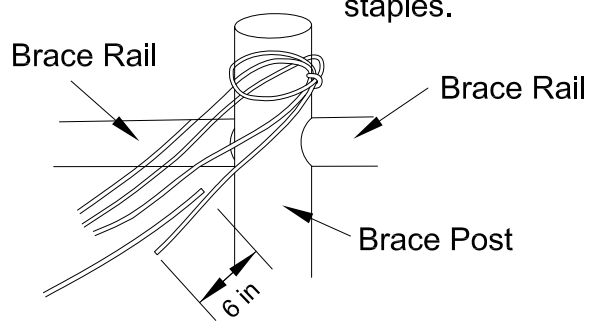

5. Cut Brace Wire from roll, allowing enough wire to wrap around Brace Post and extend 6 to 12 inches past the other wire end. Splice wires together.

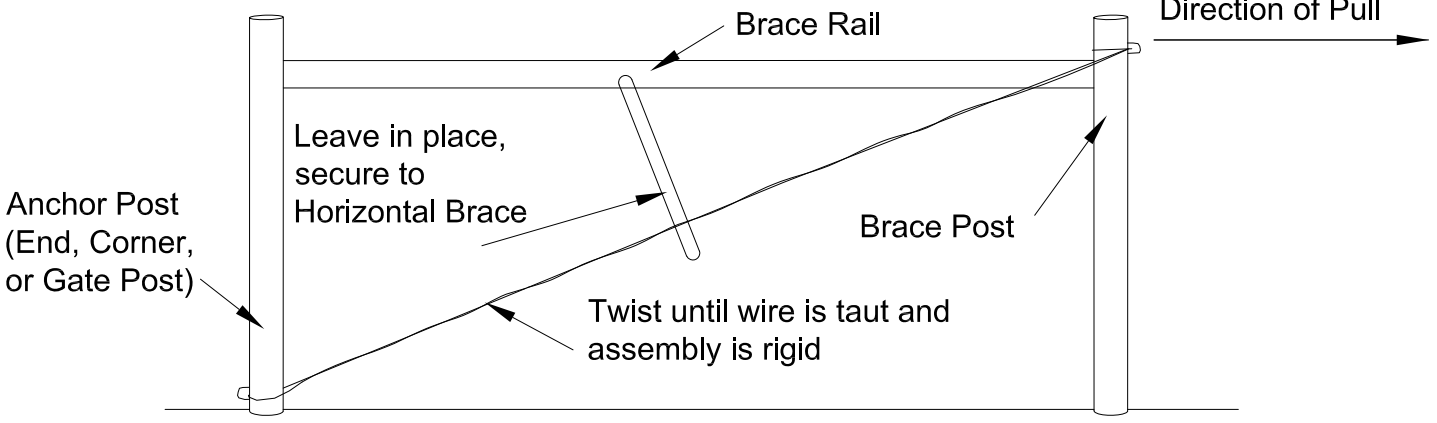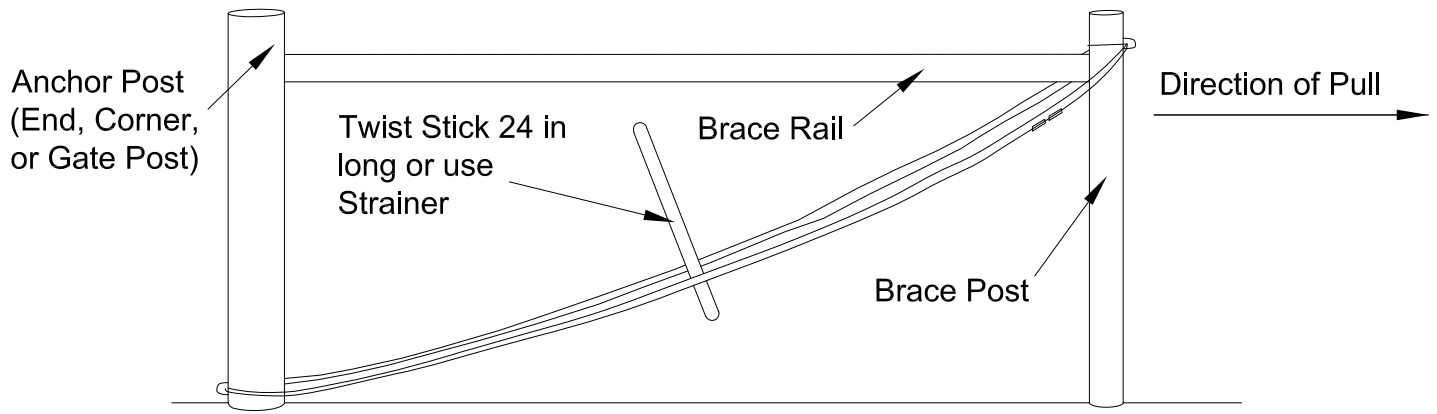

**WIRE FENCE BRACE DETAILS**

Drawing not to scale. Standardized drawing must be adapted to the specific site.